

Using loudspeaker

loop

telecoms made simple

You may use the speaker on your phone, instead of the handset, to conduct a call.

When using a programmed key:

- Without picking up the handset press the “Speaker” key.
- Dial the desired party.
- Once the party answers, you may pick up the handset or continue the call in speaker mode.
- To deactivate the speaker, pick up the handset.

Using speaker in mid conversation:

- When on a call, press and hold the “Speaker” key.
- With the “Speaker” key held down replace that handset
- Once the handset is down, you can release the “Speaker” key.

Please note – OpPoint entry/ economy/ basic handsets do not support two way loudspeaker conversations – you must pick up the handset.

Loop Telecommunications Ltd
weareloop.co.uk
0330 137 3777

Opening hours:
Monday - Thursday 09:00 - 17:30
Friday 09:00 - 16:30